

\_\_\_\_\_\_

## **Original Learn process**

 Place a strong magnet, such as a pick-up tool magnet near the receiver light. Move slowly in a circular motion

until the light becomes a steady red. Remove the magnet significantly away from the receiver. Press any button on the remote, just one button. If the light turns green, release the keyfob button, the remote has been accepted.

Once the "heartbeat" returns, disconnect power to the receiver and after approx. 5 seconds re-appy power.

The remote key fob should now be functional.

If the receiver demonstrates a series of quick red flashes after attempting to pair the keyfob, disconnect power to the receiver and after approx. 5 seconds re-appy power. Try the above procedure again. If after two attempts the system will not pair, either the receiver or keyfob is malfunctioning.



## **AutoTune Learn Process**

2) Place a strong magnet, such as a pick-up tool magnet near the reciever light. Move slowly in a circular motion until the light becomes a steady red. Keep the magnet in that position and press any button on the remote, just one button, and hold. Remove the magnet significantly away from the receiver. As soon as the light turns green release the keyfob button. Disconnect power to the receiver after the green light has completely extinguished (approx. 3 seconds). Wait approx. 5 seconds then re-appy power. The remote key fob should now be functional.

If at any time you see a alternating red/green light, the signal was not recieved properly. Disconnect power to the receiver and after approx. 5 seconds re-apply power. Repeat the process above. If you do not obtain a green light after two cycles, either the keyfob or receiver is malfunctioning.